


PGC

CALIBRATION PUMP –0.95...35 bar / –13.7...510 psi

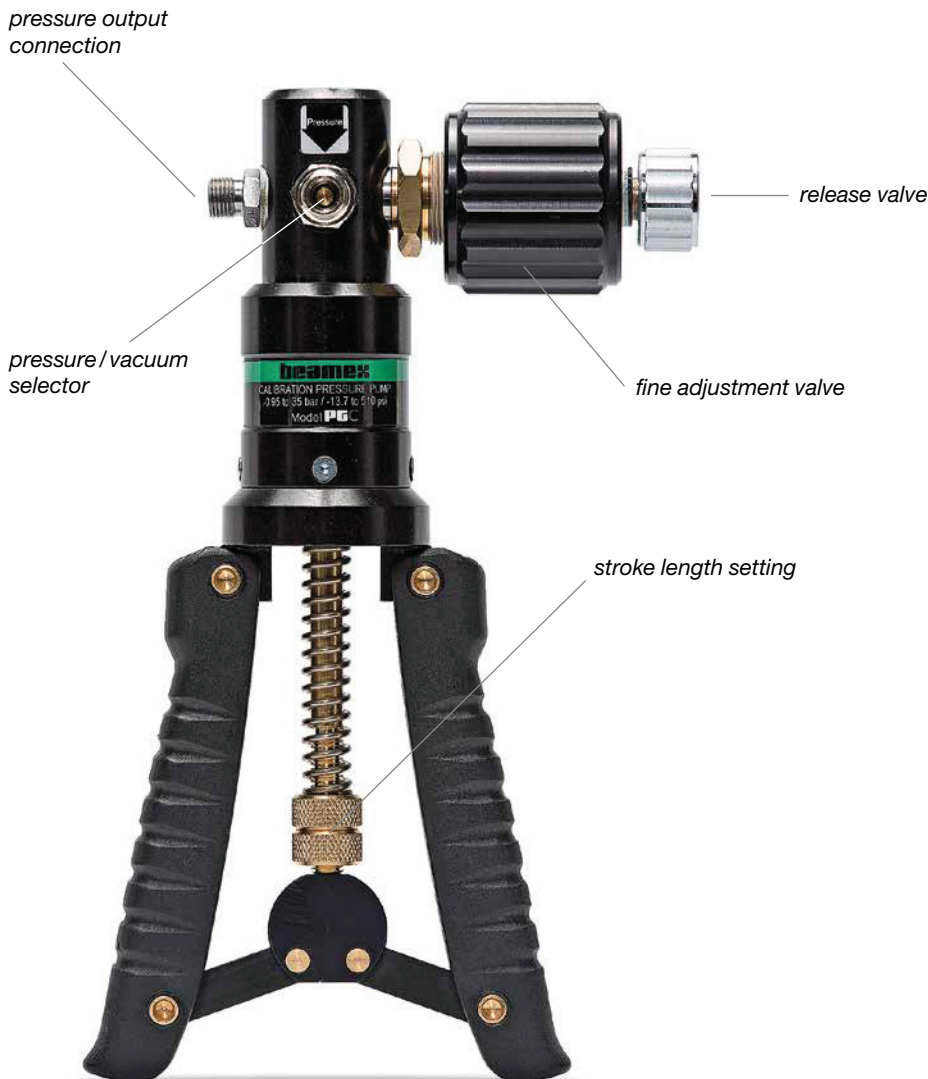

The PGC is a hand-operated calibration pump that can be used to generate pressure and vacuum. Using the pressure/vacuum selector you can quickly select if you want to generate pressure or vacuum. The fine adjustment provide means to accurately fine adjust the generated pressure.

Specifications

PGC	
Output pressure:	–0.95 ... 35 bar / –13.7 ... 510 psi
Pressure media:	Air
Output connector:	– G1/8" female – preinstalled Bx G1/8" male fitting for Beamex 40 bar (600 psi) hoses
Dimensions:	220 mm x 120 mm x 65 mm 8.7" x 4.7" x 2.6"
Weight:	820 g / 1.81 lb
Standard delivery:	<ul style="list-style-type: none">• 40 bar T-hose set• pressure fitting set for 40 bar hoses• hard carrying case (complete kit contents)
Optional accessories:	<ul style="list-style-type: none">• hard carrying case• 40 bar pressure hoses and fittings

For up-to-date list and prices for accessories, please visit webshop at shop.beamex.com

Please see 'Pressure fittings guide' at shop.beamex.com