


PGHH

HYDRAULIC CALIBRATION PUMP 0...700 bar / 0...10,000 PSI

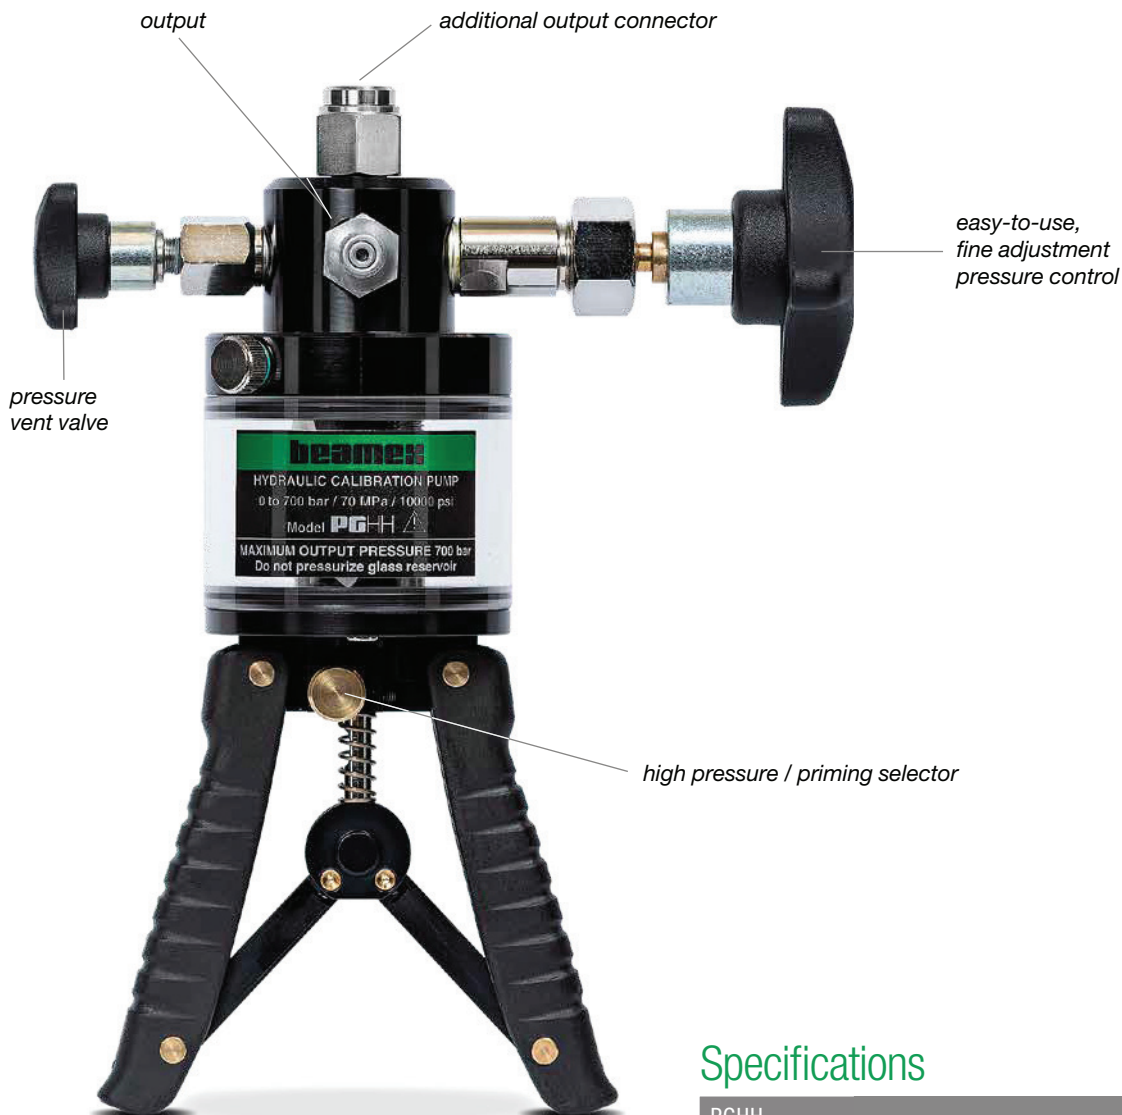

128

The PGHH is a hand-operated, hydraulic, high-pressure generator compatible with different liquids (e.g. mineral oil, distilled water, etc.). The pump is equipped with an adjustable volume control for fine-tuning generated pressure. PGHH also includes a prime/high stroke selector for easy use.

Specifications

PGHH	
Output pressure:	0...700 bar / 0...10,000 psi
Pressure media:	Distilled water or low viscosity mineral oil
Output connectors:	<ul style="list-style-type: none">- G1/4" B female for Beamex external pressure modules EXT60...1000- G1/4" female- preinstalled Bx 1215 fitting for Beamex 630 bar (9100 psi) hoses
Dimensions:	265 mm x 160 mm x 120 mm 10.4" x 6.3" x 4.7"
Weight:	1.3 kg / 2.87 lb
Standard delivery:	<ul style="list-style-type: none">• 630 bar 1.0 m hose• 1/4" NPT fitting for the hose• seals and washers• filling bottle with a cap• hard carrying case
Optional accessories:	<ul style="list-style-type: none">• hard carrying case• 630 bar / 1000 bar pressure hoses and fittings

For up-to-date list and prices for accessories, please visit webshop at shop.beamex.com

Please see 'Pressure fittings guide' at shop.beamex.com