


PGPH

PNEUMATIC CALIBRATION PUMP –0.95...140 bar / –13.7...2,000 psi

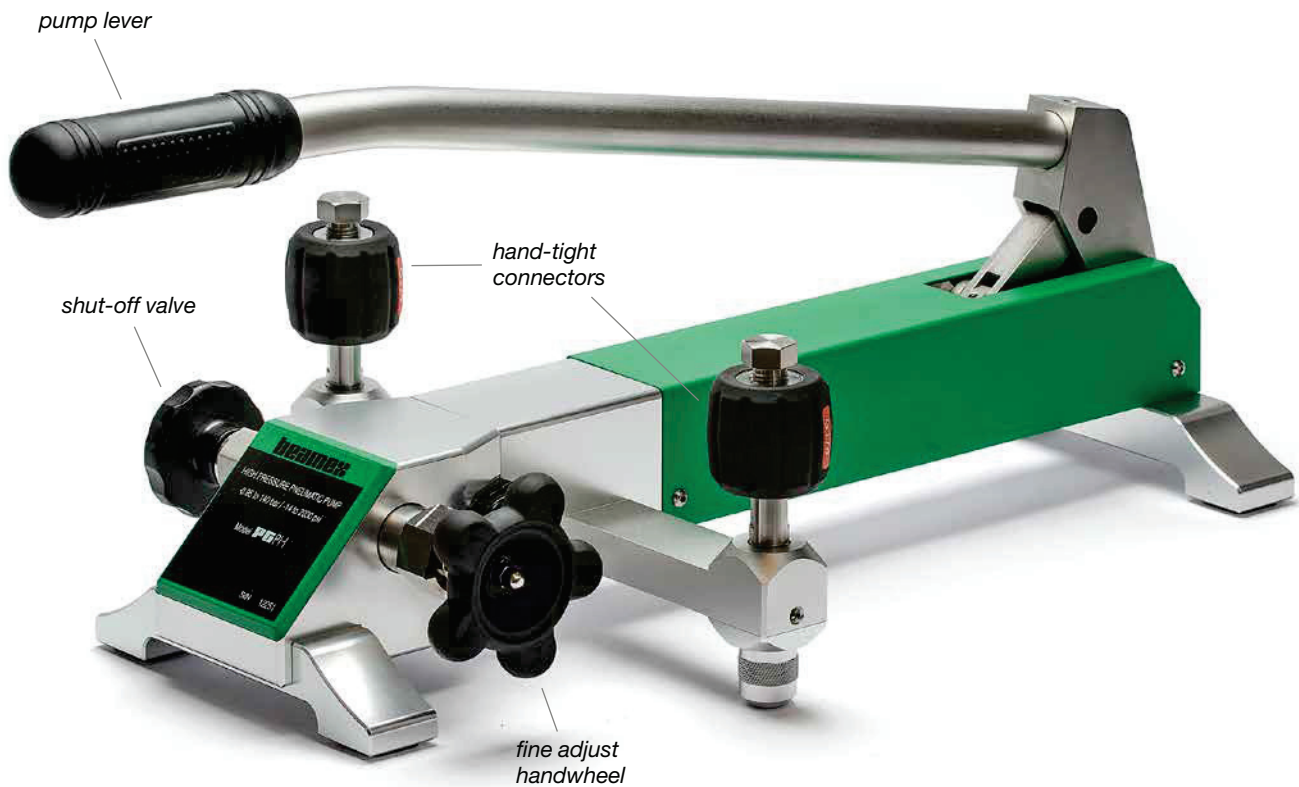

129

The PGPH is a hand-operated pneumatic (air as pressure medium) high-pressure table pressure generator. The pump is efficient in generating both vacuum and high pressure up to 140 bar (2000 psi) quickly and effortlessly. It takes less than one minute to generate the maximum pressure. The PGPH is equipped with an adjustable volume control, providing excellent fine-tuning of generated pressure, and two hand-tight connectors allowing fast and easy connections without the need for any tools.

Specifications

PGPH	
Output pressure	–0.95...140 bar / –13.7...2,000 psi
Output connectors:	2 x G 1/4" female
Temperature:	0...50 °C / 32...122 °F
Humidity:	< 85% RH
Adjusting sensitivity:	0.1 mbar (0.001 psi)
Safety pressure:	< 180 bar (2,600 psi)
Pressure media:	Air
Dimensions:	54 cm x 27 cm x 18 cm 21.26" x 10.63" x 7.09"
Weight:	7.1 kg / 15.7 lb
Standard delivery:	<ul style="list-style-type: none">• pressure plug• set of O-rings (20 pcs)
Optional accessories:	<ul style="list-style-type: none">• hard carrying case• 630 bar pressure hoses and fittings

For up-to-date list and prices for accessories, please visit webshop at shop.beamex.com

Please see 'Pressure fittings guide' at shop.beamex.com