


# Vent Valve for 40 bar pressure hoses

Vent Valve for 40 bar pressure hoses is a small and simple relief valve, mounted between the DUT (device under test) and Beamex T-hose. It prevents impurities to end up in the pressure sources and Beamex hoses. An example of the installation is shown in the picture below.

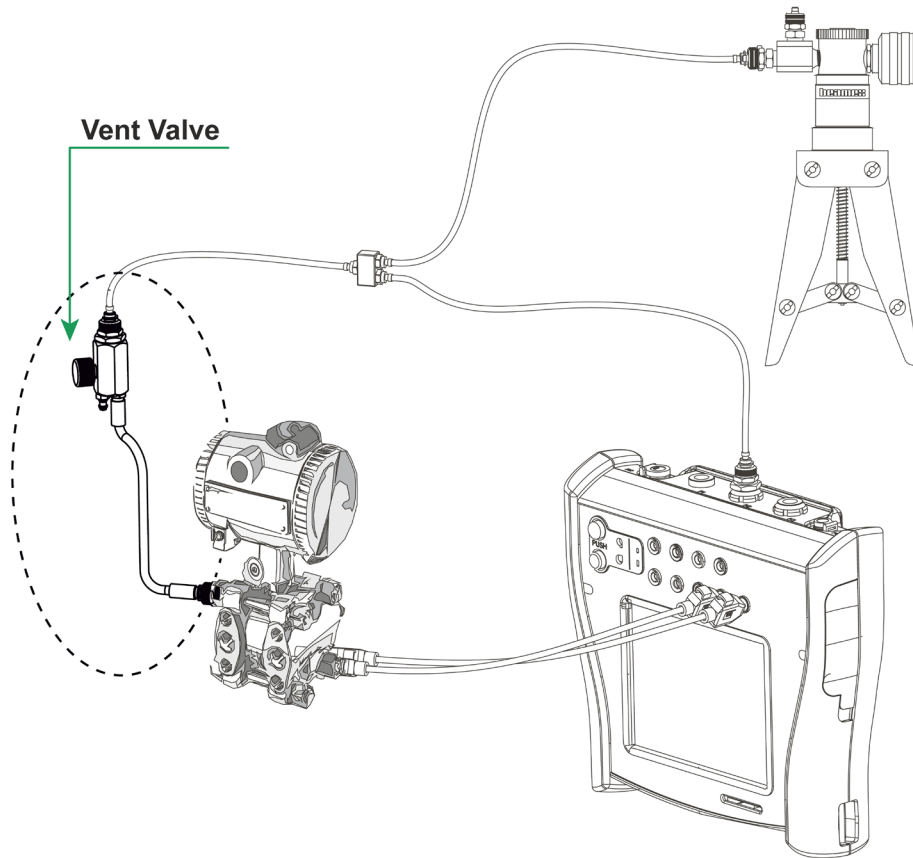

The Service Kit for Vent Valve (8009605) includes all necessary o-rings. Up-to-date spare parts are available at <https://shop.beamex.com/>.

## NOTICE

Do not use during automatic pressure calibration. When used together with ePG or POC8, generate maximum set pressure and vent your calibration setup couple of times with the Vent Valve before starting the automatic calibration procedure.

BEAMEX OY AB  
Ristisuonraitti 10  
FIN-68600 Pietarsaari  
FINLAND  
Tel: +358 – 10 – 5505000  
E-mail: [info@beamex.com](mailto:info@beamex.com)  
[service@beamex.com](mailto:service@beamex.com)  
[support@beamex.com](mailto:support@beamex.com)  
Internet: <https://www.beamex.com>